


## Installation Precautions:

- 1、 Please read the instructions carefully before installation;
- 2、 Ask a professional electrician to install;
- 3、 To avoid the risk of electric shock, ensure that the power supply is turned off before installation and maintenance;
- 4、 This lamp is only suitable for indoor installation (not for humid environment);
- 5、 Install lamps in accordance with local laws and regulations;
- 6、 The interior of the lamp is controlled by precision motor. Please handle it gently when installing, handling and transporting. Excessive impact force may cause damage to the internal gears of the motor, resulting in abnormal control .
- 7、 Do not install the lamps on unstable and unstable skylights to prevent the lamps from falling ;
- 8、 Keep the instructions for your reference.

Lamp parts detail diagram :

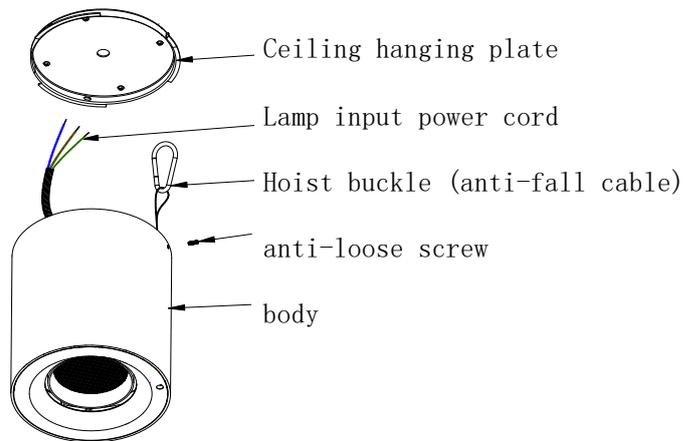


## Light mounting:


- 1、 Take out the lamp from the box, remove the round hanging plate of the lamp, and install the plastic gecko on the ceiling according to the hole position of the hanging plate, and reserve or process the wire hole .

(Plastic gecko in the parts bag), as shown below.

Note: If the ceiling is wooden, you can skip this step.

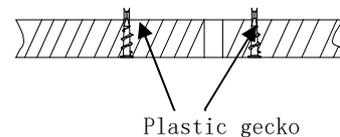


- 2、 Use 4 self-tapping screws (parts package) to fix the circular hanging plate on the ceiling, and the installation should be in the same direction, which is convenient for the control of the lamp. When securing the cable, route the power cable through the cable hole on the round rear cover, as shown in the following figure.

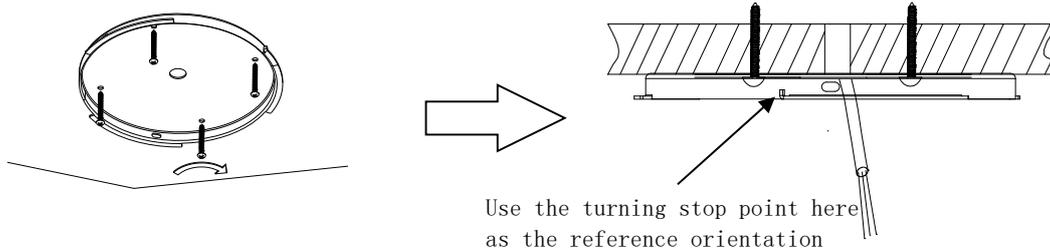

- The anti-fall wire hoist buckle on the lamp is fastened to the bearing place on the ceiling.
- Connect the mains power input cable with the lamp power cable, as shown in the figure below. .

Note: The live line has an "AC L" identifier, the neutral line has an "AC N" identifier, if there is DMX dimming, the positive pole of the dimming light has a "+" identifier, and the negative pole of the dimming light has a "-" identifier.

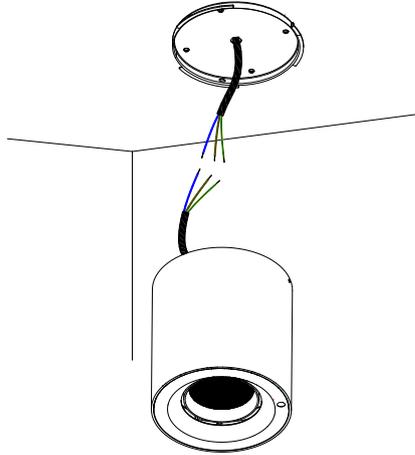


- Align the clamp point on the lamp body with the hanging plate to avoid the opening, and tighten the lamp to the ceiling, as shown in the picture on the lower left.

At the same time, turn the lamp body counterclockwise to the stop point of the hanging plate, and then lock the anti-loosening screws in (align with the side face of the hanging plate when locking), as shown in the figure on the lower right.

Note:

- The anti-loosening screw hole is recommended to take the stop point position on the hanging plate as the benchmark reference, so as to facilitate the unified direction of the lamp control.
- In order to ensure that the lamp is firmly installed, it can be turned clockwise/counterclockwise after installation and pulled down the lamp. If the lamp cannot be turned significantly, take it off to indicate that the installation is correct and intact.

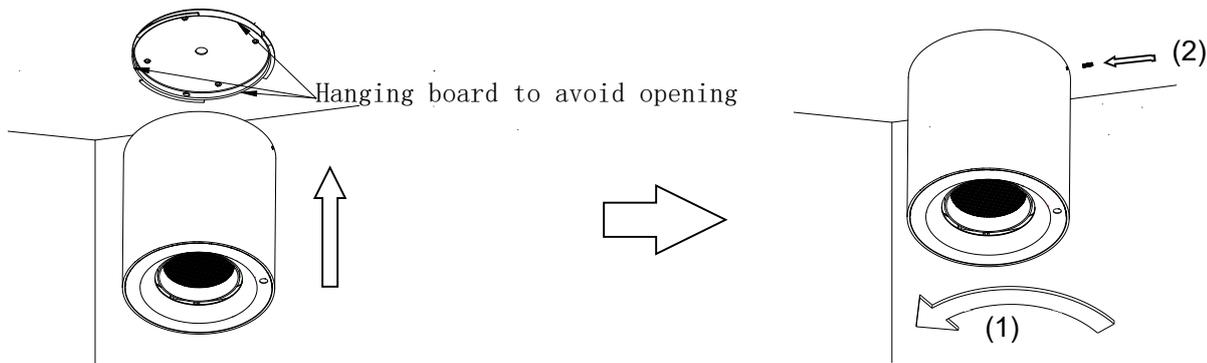

## Remote control instructions:

### 1, To user


Please read this manual carefully before use and keep it properly for reference.

In case of abnormal problems, please contact WAC technical staff for the latest information.

### 2, Product introduction

The remote control is a special remote control for remote control lamp series, using 2.4G wireless transmission scheme, with low power consumption, strong anti-interference ability, stable control; Button operation, easy to set, simple operation, simple appearance, bring users more convenient and fast experience.

### 3.Function description of the control button:

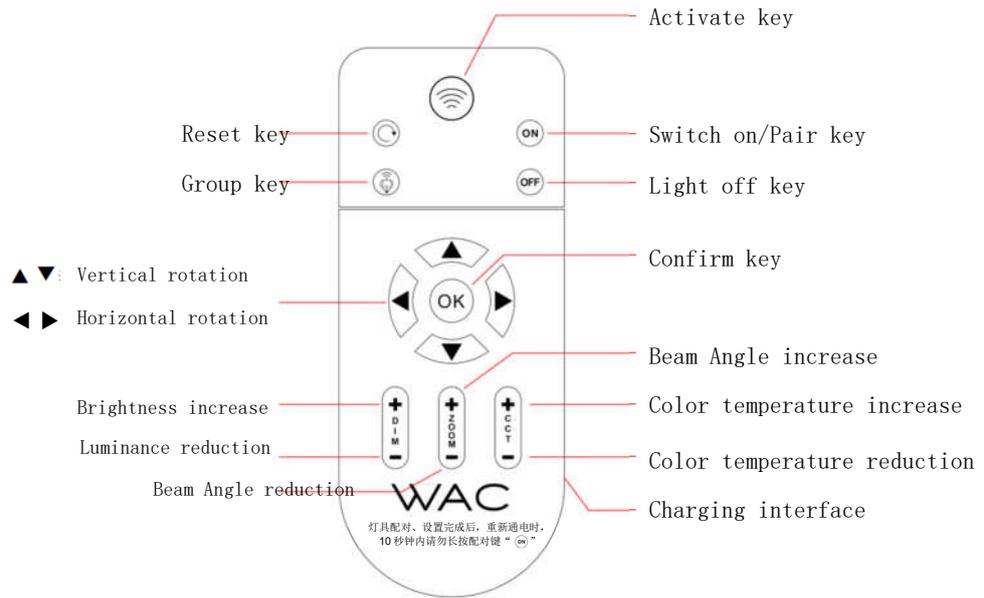

### 4.Remote control and lamp pairing, activation, operation sequence:

- Step 1: Pair the remote control with the light fixture;
- Step 2: Activate the luminaire using the remote control;
- Step 3: Use remote control to control the luminaire.

### 5.Remote control pairing operation instructions:

- a.Turn on the lamp power supply, at this time the lamp signal window area red indicator light and accompanied by "drop" sound prompt;;
- b.Long press the light button/pairing key "Ⓜ" for about 3 seconds, and the lamp flashes for 3 times (except for external appliances), that is, the pairing is successful. **Note:**

- (a).Please complete the pairing operation before the "drip" sound stops. .
- (b).You can activate the teamwork mode to check whether the pairing is successful. After teamwork is activated, the red indicator in the signal window changes to green. For details, see the next "Activation & Locking Operation Instructions".
- (c).Each remote control can be paired with 10 lamps, and 10 lamps can be paired at the same time to shorten the matching operation steps and time.
- (d).If there are more than 10 lamps in a space, it is necessary to subdivide and pair them respectively. For example, if there are 50 lamps in a space, it is recommended to pair them in at least 5 areas. At the same time, when pairing one of the areas, the other four areas need to be disconnected/turned off.

### 6.Activation & Locking operation instructions::

- a.Single lamp activation: After the lamp is paired successfully, press and hold the activation key "to drop" sound on the remote control, and the indicator turns green, that is, the activation is successful.(as shown below)
- b.Multiple lamps activation: After multiple lamps are successfully paired, hold down the group control key on the remote control at the same time to turn green, that is, activate multiple lamps that have been paired at the same time.
- c.Lamp locking operation: In the lamp activation state, quickly press the key "work" twice. If you need to reactivate the lamp, follow steps a/b.
- d.In the lamp activation state, long press the confirm key "state, long press the confirm key.

### Matters needing attention:

- (a).After the luminaire is set up, in order to prevent misoperation, the luminaire will automatically enter the locked state after working normally for 5 minutes. .

(b).When multiple lamps are activated, if one of them needs to be controlled separately, all of them need to be locked first (refer to step c), and then activated according to step a, so that individual lamps can be operated and controlled

(c).When the remote control is not paired with the lamp or is not paired successfully, the lamp indicator can be changed from red to green by following step a, but the lamp will not be controlled by the remote control.

## 7.Other instructions:

- a.The remote control adopts built-in lithium battery design, Micro-USB charging interface on the side, rated input DC5V 1A, using the corresponding USB output interface can be replenished.
- b.Reset operation: When the lamp is activated, long press the reset button "" to restore the lamp to factory Settings. After restoring factory Settings, the power should be turned off for 5 seconds and then turned on again before the remote control can be paired successfully
- c.When the lamp is paired and set, do not long press the remote control pairing key (ON) within 10 seconds when the power is turned on again, to avoid pairing confusion caused by repeated pairing of different remote controls.
- d. This lamp adopts memory function chip, after the power is turned off and turned on again, the lamp still maintains the setting state before the power is cut off.。

