


Installation Precautions:


1. Please read through the Instructions before installation.
2. This luminaire is used in W track system or compatible tracks of other company brands, the track parameters of the guide rails: Input voltage: AC 220-240V 50/60Hz; Maximum current: 16A; Maximum load: 3680W.
3. Installed by a qualified electrician;
4. To avoid the risk of electric shock, please confirm that the power is turned off before installing and maintaining the luminaire;
5. Only suitable for indoor installation (not suitable for humid environments);
6. The light source of this luminaire is non-replaceable. If replacement is necessary (such as when the light source reaches the end of its life), the entire luminaire should be replaced;
7. Please keep this manual properly for future use.

Assemble The Guide Rail Lamp Connector:


1. Before assembly, ensure that the "conductive switch" is parallel to the connector, and press the "1", "2", or "3" gear state displayed within the ring of the phase-change knob as required.

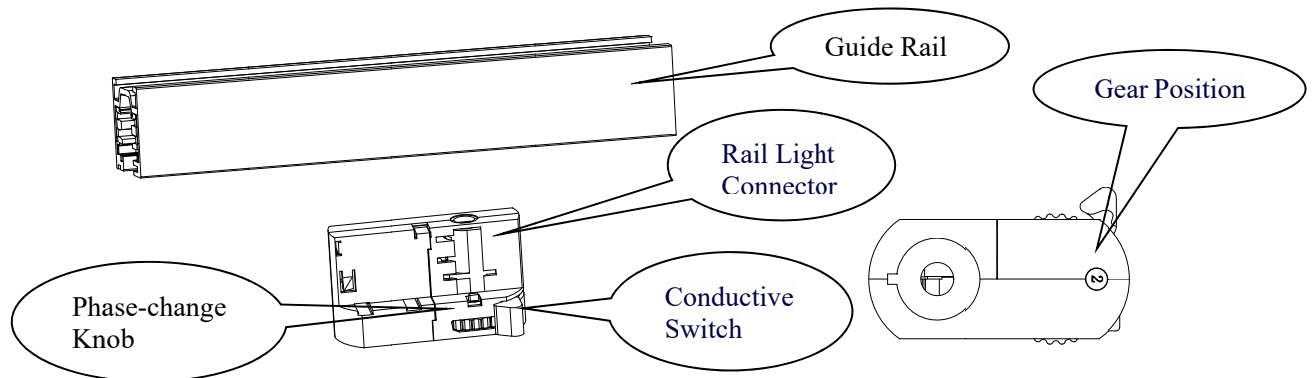

2. Align the projection of the guide rail light connector with the groove of the guide rail before assembly.

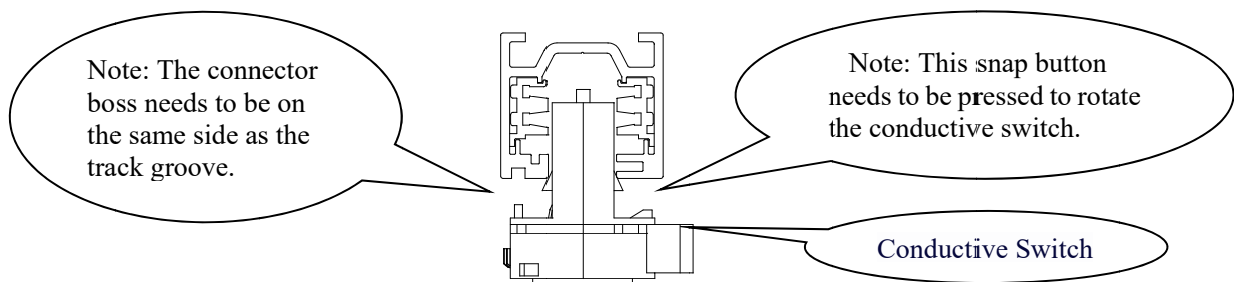


3. After assembly, turn the "Conductive Switch" clockwise by 90 degrees to conduct.

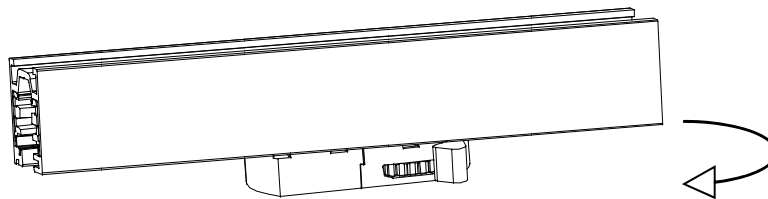

Note: The procedure for removing the guide rail light connector is the reverse of the procedure for installing the guide rail light connector.


Lamps and Brightness Adjustment Instructions:

1. After the lamp is installed, the lamp body can be rotated vertically by 90° and horizontally by 355°.
2. The side knob can adjust the brightness.

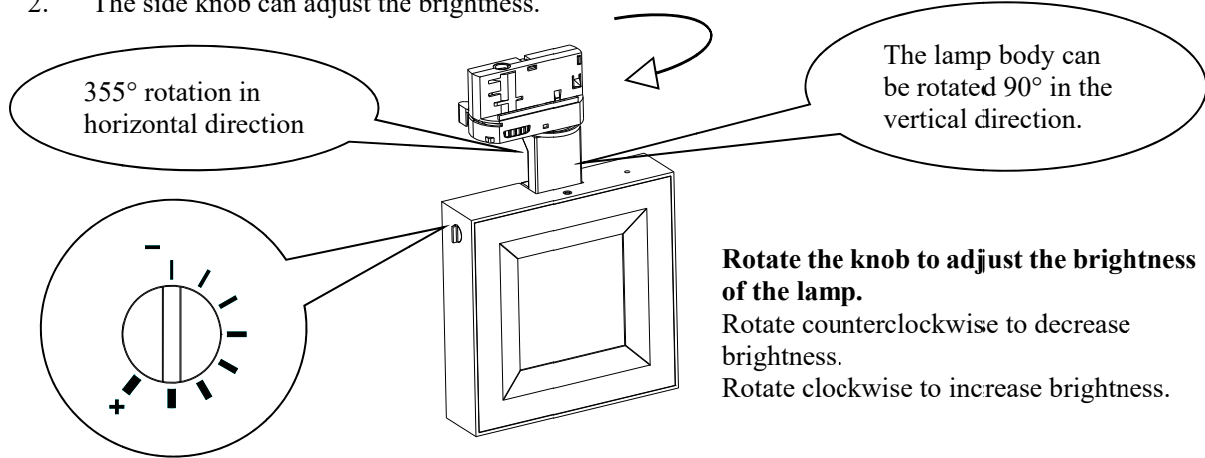

Installation of Accessories:

1. Turn the lamp body down to the appropriate position, align it with the round hole on the lamp body with a hexagonal wrench or small screwdriver, gently push it, and the front cover will automatically pop up. Then pull out the front cover with your hand.
2. Unclip the reset buckle on the cover with your fingers, remove the transparent lens, and replace it with the selected optical accessory or honeycomb network.

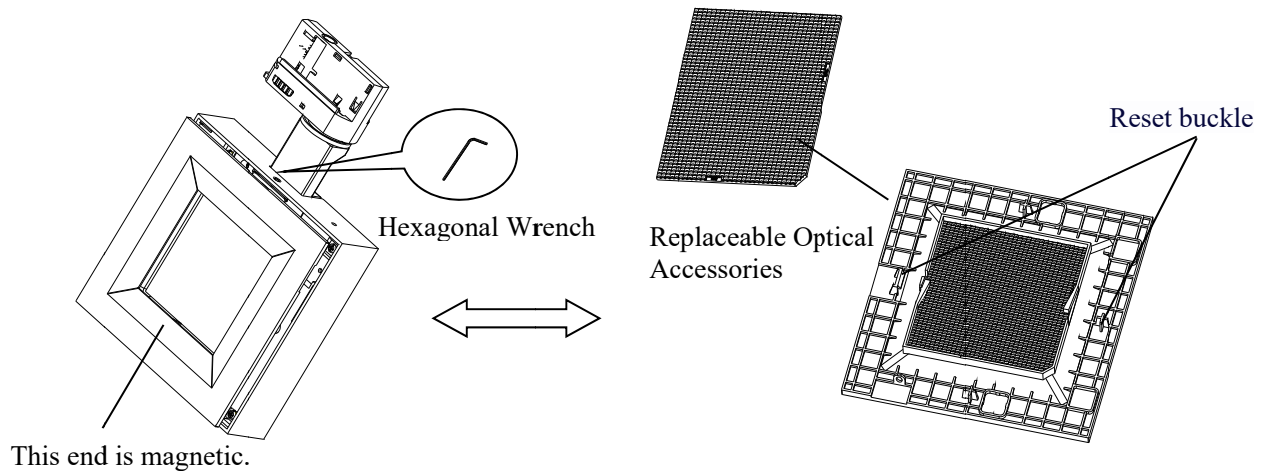

3. The installation sequence is the reverse of the removal sequence. Install the cover in the direction of the corresponding buckle, and when you hear a "click" sound and the lamp cover is not raised, it is installed.

Maximum Lifting Weight:

1. The maximum weight that the track system can withstand is shown in the following figure, which includes the weight of the entire suspension system.
2. The maximum load that a single adapter can bear is 10kg (the load is applied to the adapter according to the normal installation position of the lamp).

