

Embossed PC Cover

0

## I. Installation Precaution:

- 1. Please read all installation precautions carefully.
- 2. For indoor installation only (not for use in humid environment).
- 3. The installation and testing of the luminaires must be operated by professionally qualified personnel.
- 4. Please make sure to turn off the power before installation to prevent electric shock.

Matte PC Cov


Installation of Clip

Clip connectors

5. Please keep the instruction manual for reference.

## II. . Luminaire Size

Length L+5mm\*Width W+5mm\*Height H+50mm

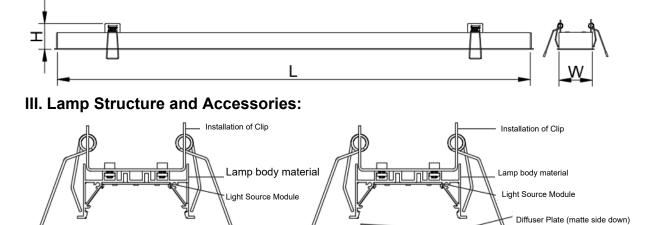


Lamp body material



## IV. Installation Methods and Procedures:

0


1. Toggle the mounting clip on the luminaire profile in collaboration with people. Tilt the profile body and position it in the ceiling opening. Locate the illuminated surface underneath until it is flush with the ceiling.

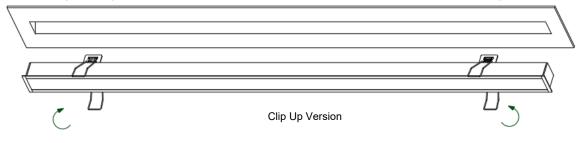

Authorized by WAC Lighting Corporation, USA, holder of the "WAC" trademark.

China Marketing Headquarters:WAC Lighting Technology (Shanghai) Co.Address:Room 102, No. 14, Lane 299, Bisheng Road, Pilot Free Trade Zone, Shanghai (201204), P.R.C.China Factory:Manufactured WAC Lighting(Dongguan)Co,LtdAddress:No. 390, Qingfeng Road, Qingxi Town, Dongguan City, Guangdong Province, 523653, P.R. China1/2

## WAC

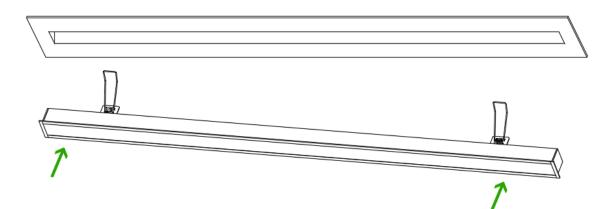

2. Connect the power input wire of the fixture to the power supply, L is the fire wire, N is the zero wire,  $(\_)$  is the ground wire, an the input voltage is AC 220V~240V 50/60Hz. Light up the fixture to complete the last step of fixture installation.



Authorized by WAC Lighting Corporation, USA, holder of the "WAC" trademark.

	China Marketing Headquarters:	WAC Lighting Technology (Shanghai) Co.	
	Address:	Room 102, No. 14, Lane 299, Bisheng Road, Pilot Free Trade Zone, Shanghai (201204), P.R.C.	
	China Factory:	Manufactured WAC Lighting(Dongguan)Co,Ltd	
	Address:	No. 390, Qingfeng Road, Qingxi Town, Dongguan City, Guangdong Province, 523653, P.R. China	2/2